

HOLOGIC® 36 Apple Ridge Road Danbury, CT 06810 USA Tel: 800.447.1856	Field Modification Instructions		
	Title: SecurView Documentation Disk Instructions		
	Subject: Installing SecurView Online Guide files		
	Part Number: MAN-02562	Revision: 003	Date: Oct. 2019
	Page: 1 of 3		
Units Affected: New SecurView DX/RT Workstations			

Purpose/Scope

Use this FMI to install the SecurView® Online Guide. The online guide is available to users when they select the **Help** button on either the SecurView toolbar or on the *Administrator* screens. The SecurView Documentation Disk contains the online guide files, which provide the US and outside the US (OUS) user manuals for SecurView workstations.

These instructions are intended solely for use by Hologic Service Engineers and service partners. Only individuals trained and certified by Hologic to repair, maintain, and install Hologic products are qualified to perform these procedures.

Estimated Time

This procedure takes approximately 10 minutes.

Prerequisites

For passwords, log into the SFTP server (<https://drftp.hologic.com> or <https://nwkftp.hologic.com>) and navigate to the */shared software/Password* folder, which contains the password file. Dealers can access the password file by logging into *dicom@hologic* on the <https://drftp.hologic.com> SFTP server. For further assistance, contact Hologic Product Support.

Required Tools and Equipment

None.

Work Area Preparation

None.

Safety

Observe all electrical, mechanical, and radiation safety standards.



Warning:

Always follow the safety precautions for x-ray exposures.



Caution:

Always obey Electrostatic Discharge (ESD) precautions when working with electronics and electronic components.



Note

It is recommended that you read through this document fully before starting to work.

HOLOGIC® 36 Apple Ridge Road Danbury, CT 06810 USA Tel: 800.447.1856	Field Modification Instructions		
	Title: SecurView Documentation Disk Instructions		
	Subject: Installing SecurView Online Guide files		
	Part Number: MAN-02562	Revision: 003	Date: Oct. 2019
	Page: 2 of 3		
Units Affected: New SecurView DX/RT Workstations			



Note

The Service Engineers must complete Hologic training courses before they operate or service a system.

Procedure

1.1 Installation Procedure

1. If the SecurView application is running, log in as service. Select the **Exit to Windows** tab, then select **OK** to confirm.
2. Load the SecurView Documentation Disk and navigate to the DVD-ROM drive.
3. Double-click **SystemUpdater.exe** to start the installer. The *SecurView Documentation Updates* window appears.
4. Select either the 'SecurView documentation for US' or 'SecurView documentation for OUS' option and select **Next**. You must select the 'OUS' option to install the translated user manuals.
5. Select **Start**. The installer begins updating the files.
6. Select **Exit** when installation is complete.
7. Remove the SecurView Documentation Disk from the DVD-ROM drive.
8. Install SecurView Online Documentation for other languages:



Note

This step is mandatory if you require languages other than English, Spanish, Italian, German, French, or Brazilian-Portuguese. If you do not need any additional languages, skip to step 9.

- a. Navigate to **E:\SecurView\Help\English** and rename 'SCR.pdf' to 'SCR-EN.pdf'.
 - b. Navigate to **E:\Securview\Help** and locate the folder for the language you wish to install.
 - c. Copy 'SCR.pdf' from that folder into **E:\Securview\Help\English**.
9. Verify the installation.
 - a. Double-click the SecurView icon and log in as **admin**.
 - b. Select the **Administration** tab to display the *User Setup* window.
 - c. Select **Help**. The updated Online Guide should appear.

HOLOGIC® 36 Apple Ridge Road Danbury, CT 06810 USA Tel: 800.447.1856	Field Modification Instructions			
	Title: SecurView Documentation Disk Instructions			
	Subject: Installing SecurView Online Guide files			
	Part Number: MAN-02562	Revision: 003	Date: Oct. 2019	Page: 3 of 3
	Units Affected: New SecurView DX/RT Workstations			

Record the FMI Installation

Service Engineers who have access to the Hologic intranet (<https://my.hologic.com>) should complete this online report:

1. From MyHologic, select **Divisions > Breast & Skeletal Health Solutions > BSH Customer Experience and Service > Imaging Field Service Team Site**.
2. On the *Imaging Field Service* web page, locate and select the **Installation Report** button.
3. Fill out all required fields and select **Submit**.

Authorized dealers who have access to the Hologic extranet (*The WIRE*) should complete this online report:

1. Navigate to <https://thewire.hologic.com/installation-form> to access the installation report.
2. Fill out all required fields and select **Submit**.