



Generator Overview

Instrument Receptacle

- Illuminates green with compatible CoolSeal Instrument
- Illuminates **red** with invalid instrument



Front Panel

Activation Display

- Illuminates blue when sealing
- Illuminates **amber** when seal imcomplete

Power On / Off

Indicated by:

- Illuminates green when on
- Illuminates **red** if fails standby

Causes:



To Resolve:

Back Panel

Activation Alerts

Seal Complete

CoolSeal	 A three sequential tone alert RF energy delivery stops Activation display brightens blue for a half (0.5) second 	Successful vessel seal.	None. Normal operation.
Reactivate / Incomplete Seal	Indicated by:	Causes:	To Resolve:
CoolSeal	 A three-pulsed alert tone RF energy delivery stops Activation display brightens amber for one (1) second 	Seal time exceeds five (5) seconds OR User either opened the instrument jaws or released the activation button, which causes the seal cycle to be interrupted before seal was completed OR Current stays at the maximum current limit for longer than four (4) seconds, which indicates an electrical short between the jaws has occurred OR The instrument has been activated in open air	1. Release the activation button 2. Press the activation button to reactivate the seal cycle without repositioning the instrument 3. Open the instrument jaws and inspect for a successful seal 4. If possible, reposition the instrument and regrasp tissue in another location, then reactivate the seal cycle 5. Visually inspect seal before cutting





Error Alerts

System Error	Indicated by:	Causes:	To Resolve:
	 A single-pulsed alert tone RF energy delivery stops 	Generator not functioning properly, failed an internal self-check.	Press the power button to ture off the generator
	Power button illuminates and		2. Wait at least 30 seconds
-distribute.	remains red		Press the power button to tu on the generator
			 Confirm the power button illuminated green before use
			If the system error reoccurs:
CoolSeal'			• Do not use the generator
			 Use a different CoolSeal™ Generator or alternate mear to complete the procedure
			Return the malfunctioning generator as instructed in the CoolSeal Generator User's Gui
valid Instrument	Indicated by:	Causes:	To Resolve:
valid Instrument	A single-pulsed alert tone	Causes: An unusable instrument has been connected.	
valid Instrument	 A single-pulsed alert tone Instrument receptacle display illuminates amber or red 	An unusable instrument has been	Disconnect instrument from
valid Instrument	 A single-pulsed alert tone Instrument receptacle display 	An unusable instrument has been connected. OR	 Disconnect instrument from the generator Ensure instrument is CoolSeal™ compatible
valid Instrument	 A single-pulsed alert tone Instrument receptacle display illuminates amber or red Generator will not allow RF 	An unusable instrument has been connected. OR	 Disconnect instrument from the generator Ensure instrument is CoolSeal™ compatible Turn off the system, then turn the system back on
valid Instrument CoolSeal O	 A single-pulsed alert tone Instrument receptacle display illuminates amber or red Generator will not allow RF 	An unusable instrument has been connected. OR	 Disconnect instrument from the generator Ensure instrument is CoolSeal™ compatible Turn off the system, then turn the system back on Reconnect instrument to the generator Confirm the instrument
	 A single-pulsed alert tone Instrument receptacle display illuminates amber or red Generator will not allow RF 	An unusable instrument has been connected. OR	 Disconnect instrument from the generator Ensure instrument is CoolSeal™ compatible Turn off the system, then tur the system back on Reconnect instrument to the generator Confirm the instrument receptacle display illuminate green
nvalid Instrument CoolSeal O	 A single-pulsed alert tone Instrument receptacle display illuminates amber or red Generator will not allow RF 	An unusable instrument has been connected. OR	 Disconnect instrument from the generator Ensure instrument is CoolSeal™ compatible Turn off the system, then turn the system back on Reconnect instrument to the generator Confirm the instrument receptacle display illuminates